


1. Attach plastic feet to all 4 uprights
2. Attach top, bottom and central side beams to the uprights to create 2 side frames. Tap with a mallet to secure the beams in place.
3. Attach the top and bottom face beams at the same level as the side beams to secure the bay.
4. Attach the rest of the front face beams at the desired heights. (See Beam Orientation image to install the beams correctly)
5. Attach the rest of the back beams at the heights relative to the front beams to create angled shelf. (See image with Back and Front Beams positions to install the beams correctly - you can count the slots on the uprights to determine correct position)
7. Place the chipboard shelves onto the levels - the 2 smaller shelves at the top and bottom, the deeper shelves with angled edges onto the angled shelf levels.

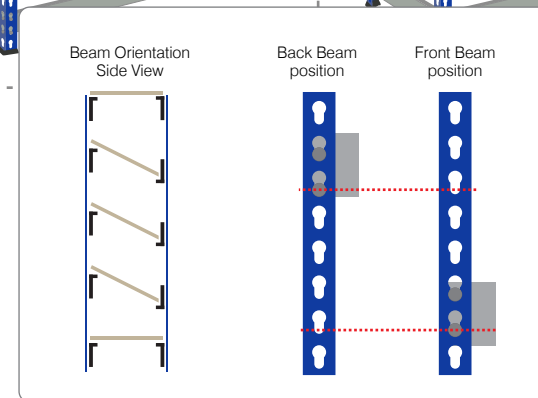

### Tools Required

Rubber Mallet

### Safety Precaution

**Two competent people** wearing **safety gloves**, **safety shoes** and **protective eyewear** are recommended to undertake the assembly.



scan for more info